


# WALL MURAL

# PEEL & STICK INSTALLATION GUIDE

Please read these instructions carefully before you start to install your wall mural.

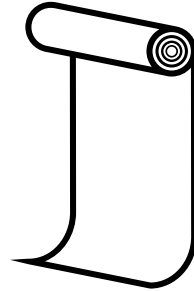

## Before you Begin - Wall Preparation

### To Install on Plaster

Preparing the wall is the most important part of the process. Ensure the wall is properly prepared and that it is clean and dry with no loose plaster or contaminants. The wall **MUST** be smooth and free from any texture. You **MUST** size your wall with a good quality primer/sealer. This will help seal a porous surface.

### To Install on a Painted Wall

We recommend that you install over matt emulsion paint only. If you have an old painted wall with some loose or flaky paint we recommend that you correctly prepare the surface and then size your wall with a primer/sealer before installing. If your wall has been freshly painted, please allow 2 to 3 weeks drying time before installing your mural. Sizing the wall before installation is recommend.

### Paper Surface

Remove any old paper. If not, the new wallpaper may not stick down properly. **Do NOT use lining paper** underneath this mural.

### CHECK YOUR MURAL

Please check your entire mural carefully before you begin to install. Lay the panels out and leave to rest for at least 5 hours. If you notice any defects with the material or image, **please STOP and contact us straight away - DO NOT INSTALL THE MURAL**. (This includes creases, defects, marks, panel edges and any image issues).

### OTHER

- Do not pre-trim your mural before installing.
- Do not rub the mural surface vigorously during installation and overwork the seams.
- We recommend that two people install this mural together to help achieve the best results.


See next page for 'Getting Started'



If you have any queries about the installation, please call **+44 (0)1772 284110** or email **info@wallsauce.com** for information and advice. You can also download these instructions on our website **www.wallsauce.com**

# What You'll Need

Tape measure, spirit level, pencil, Stanley knife/cutting knife, straight edge (for trimming).



## 1. Getting started

- The wall mural is supplied in 'drops'. Carefully unpack each of the 'drops' and lay them out in order.
- Start from the left or right and work from a straight plumb line.
- Please ensure your wall has a smooth, clean and dry surface that is free from any fixtures or loose plaster or paint. If your surface is dry and absorbent, you may need to paint it or seal it with a primer-sealer. **Important - please read 'Before you Begin - Wall Preparation'**
- We advise that you sponge the wall prior to installing the panels to ensure the wall is perfectly clean and ready for your mural.

## 2. Installing the first drop

- Taking your first panel, carefully peel a small amount of the mural at the top from the backing paper.
- Apply the top of the panel to the wall, ensuring that the right hand edge aligns with your vertical line.
- Carefully peel away the rest of the mural from the backing paper, gently applying it to the wall as you go until you reach the bottom of the panel.
- If you need to re-position any part of the panel, simply peel the appropriate amount away from the wall and re-apply, gently smoothing the mural out as you go.

## 3. Additional panels

- Apply the second and subsequent panels, ensuring the pattern or image matches up as you go and that the appropriate amount of bleed runs over the top and bottom edges. Our panels are applied 'edge to edge', so each panel butts up to the next on the wall. There is no overlap on the panels.
- When butting up, gently place the panel into position and adjust as appropriate. Ensure the panels are well butted, without any gaps between them.
- Follow the same process of smoothing the panel, ensuring this is done very gently.
- Continue to apply all middle panels before installing the last panel, which should be your far left or far right panel, depending on which side you started.

## 4. Trim top, bottom and side

- When all panels have been adhered, carefully trim the top and bottom of your panels plus the far left and far right sides, using a straight edge. Don't rush this and ensure you have sharp blade to achieve the best results.

Textured Peel & Stick - Oct 18 / v7